

SKIP BLANK PAGES

SCENARIO

- Do you typically copy documents that are a mix of one-sided and twosided?
- Would you like to remove the blank pages from your mix of one-sided documents?

BENEFITS

- Help improve convenience and remove blank pages from copied document sets without the need for special software
- Files without blank pages can be easily generated when copying a document that includes both one-sided and two-sided originals.
- Easily remove the blank last page of an odd-numbered double-sided document.
- Use less paper when copying documents by removing the blank sides



Note:



HOW TO:

Skip Blank Pages – From the Copy Screen

- Place the document on the platen glass or in the automatic document feeder (ADF)
- From the [Home Screen], select [Copy]

Note: If your device is configured with device log in or ULM, enter your log in information to access the Main Menu screen.

Select [Options]. Various adjustments can be made through this menu





Find and select [Skip Blank Originals]

Note: Button location may differ on each device. Navigate through pages using the up/down arrows to find the required function.





HOW TO:

Skip Blank Pages – From the Copy Screen

documents to skip. [All Colors]
will skip blank pages on colour
paper. [White Only] will skip
blank pages on white paper

only. Press [OK]

Select the colour of the



Press [Adjust Recog. Level] to help set the accuracy for skipping blank pages



Use the [+] and [-] buttons to adjust the sensitivity. Press [OK]

Note: Use lower levels if the file has faint text or images that could be mistaken as blank pages. Use higher levels if the file has dark borders or images that can be seen through the page.





HOW TO:

Skip Blank Pages – From the Copy Screen

Once you are finished, press [Close] to return to the Copy menu.



Press [Start] on the Control
Panel to begin copying

