





Entering Sleep Mode

69KS-03A



The sleep mode function reduces power consumption by temporarily disabling some internal operations of the machine. You can put the machine into sleep mode simply by pressing  (Energy Saver) on the control panel. When the machine is in sleep mode, the touch panel display turns off and  (Energy Saver) lights up. 

Control Panel


NOTE

- The machine may not enter sleep mode depending on the machine's operation status and conditions.
- You can set the order for starting necessary functions when you perform operations after exiting sleep mode.  **<Sleep Mode Eco Exit>**
- The Processing/Data indicator flashes or maintains a steady green light even when the machine enters the Sleep mode.


Exiting Sleep Mode

If <Use Motion Sensor> (Settings/Registration) is set to <On>, the machine exits sleep mode automatically when a person is nearby. If the machine does not exit sleep mode, press  (Energy Saver).  **<Use Motion Sensor>**

NOTE

- For information on the location of the motion sensor, see  **Front Side**.
- When the sleep mode is canceled by the motion sensor and no operation is performed within 60 seconds, the machine enters the sleep mode again even though the Auto Sleep time has not elapsed.
- If <Use Motion Sensor> is set to <Off>, the machine exits the sleep mode when one of the following operations is performed:
 - When the Energy Saver key is pressed on the control panel*¹
 - When originals are placed in the feeder
 - When the feeder is opened
 - When paper is loaded in/removed from the multi-purpose tray*¹
 - When a cover on the machine is opened/closed*¹
 - When an IC card is held over an IC card reader installed to the machine to log in*²


*¹ Some models of the machine do not support this function.

*² Applicable only when <Sleep Mode Energy Use> is set to <High>.  **<Sleep Mode Energy Use>**

When You Want to Set the Auto Sleep Timer

You can use the <Auto Sleep Time> setting to automatically put the machine into sleep mode. If you want to change the amount of time that elapses before the machine enters auto sleep mode, follow the procedure below.



 (Settings/Registration) ▶ <Preferences> ▶ <Timer/Energy Settings> ▶ <Auto Sleep Time> ▶ ▲ or ▼ to set the amount of time that elapses before the machine automatically enters sleep mode ▶ <OK>.

NOTE

- You can set the time range to automatically enter sleep mode by the day of the week. ▶ **<Auto Sleep Weekly Timer>**

Energy Consumption in Sleep Mode

You can set the amount of energy that the machine consumes when it is in sleep mode. Follow the procedure below to set the amount of energy consumed in sleep mode.



 (Settings/Registration) ▶ <Preferences> ▶ <Timer/Energy Settings> ▶ set <Sleep Mode Energy Use> to <Low> or <High>.

NOTE

When using a wireless LAN or Bluetooth also while in sleep mode

- If you set <Sleep Mode Energy Use> to <Low>, enable <Compensate for Network Comm.>. If <Compensate for Network Comm.> is not enabled, neither wireless LAN nor Bluetooth can be used during sleep mode.

This document covers the following products:
Canon imageRUNNER ADVANCE C356iF / C256iF

▶ **Find manuals for other products**

If you can't find what you're looking for, please use the search function.

imageRUNNER ADVANCE C356iF / C256iF
User's Guide (Product Manual)

USRMA-2640-07 2019-12 Copyright CANON INC. 2019